

BARRIER TYPE TURNSTILE

Model: 838 / 838D

Operation

The door leaves open and close automatically.

Adjustable modes of operation are:

- open ground state

The door leaves are being closed automatically as soon as an unauthorized passage is registered.

- closed ground state

The door leaves are being opened automatically in vice verses.

Entry direction

- clear
- locked
- electrically controlled
- by an access control system
- manual

Exit direction



- clear
- locked
- electrically controlled
- by an access control system
- manual

Electrical Supply

Control integrated in the unit supply : 230 V AC 50 Hz

Options

- Installation of card readers
- Signal equipment
- Control desk or panel for remote control (release & block)
- Mode selection switch
- Railing elements for flow guidance or as barrier in a suitable design
- Counting mechanism

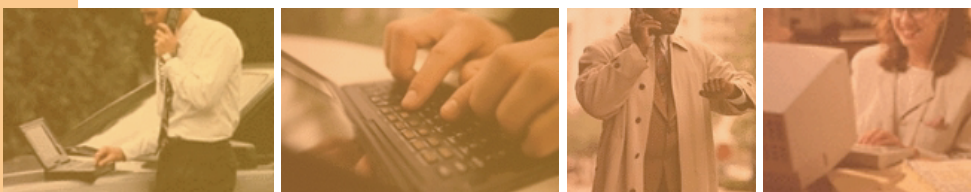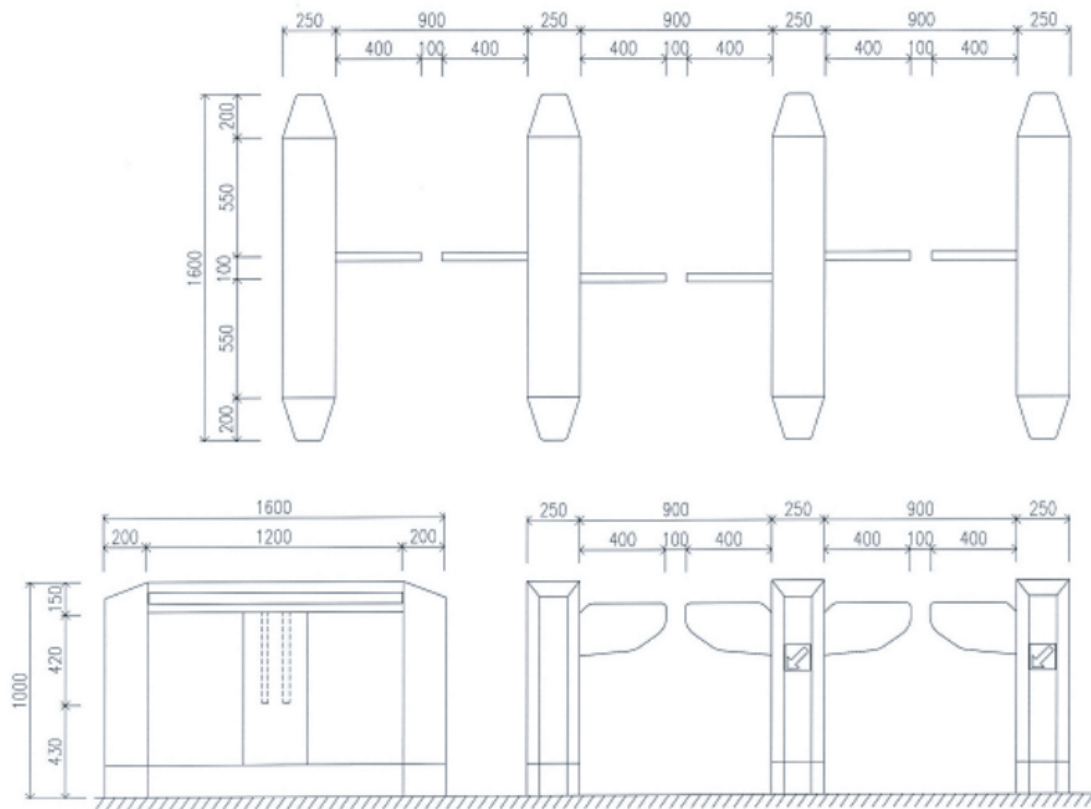

www.aceautomatic.com